


Trimble T100

TABLET

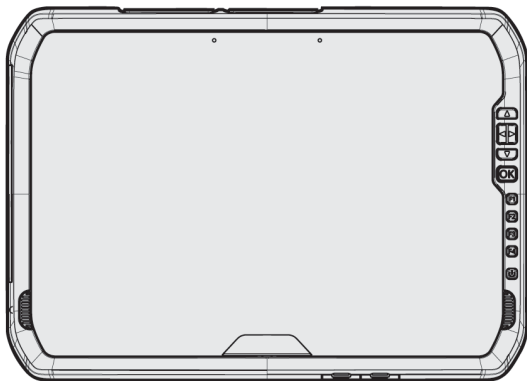


CAUTION – Please read the full user guide including all safety warnings, before operating this product.



In the box

- ▶ Trimble T100 tablet with integrated batteries
- ▶ AC-DC USB-C power adapter
- ▶ USB-C to USB-A adapter
- ▶ Quick Start Guide
- ▶ EMR stylus with replacement tips and tether
- ▶ Screen protector


PARTS OF THE TRIMBLE T100 TABLET

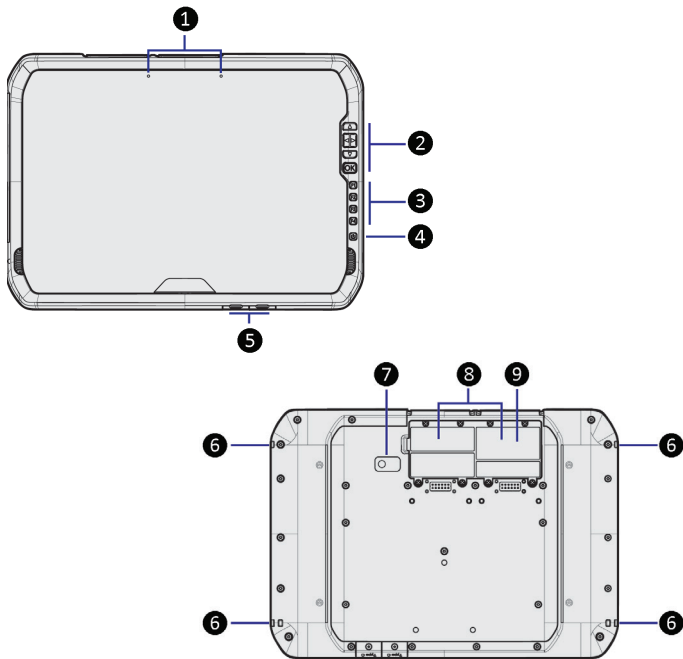


- | | | | |
|---|-----------------------------|---|---|
| 1 | Dual microphones | 6 | Stylus tether loops (x4) |
| 2 | Directional pad & OK button | 7 | Camera and LED flash |
| 3 | Function keys (x4) | 8 | Trimble EMPOWER module bays (x2) |
| 4 | Power button | 9 | MicroSIM & MicroSD card slots
(Remove door to access card slots) |
| 5 | USB C-Type ports (x2) | | |

INSTALL MicroSIM CARD / MicroSD CARD (OPTIONAL)


Remove door to access
MicroSIM card and
MicroSD card slots.

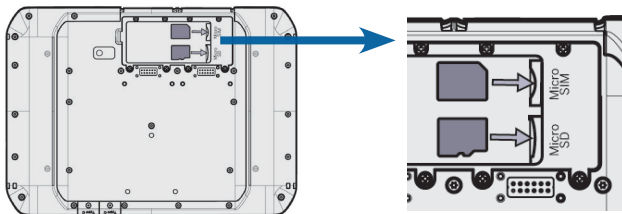


TETHER THE STYLUS. STORE IN THE STYLUS HOLDER

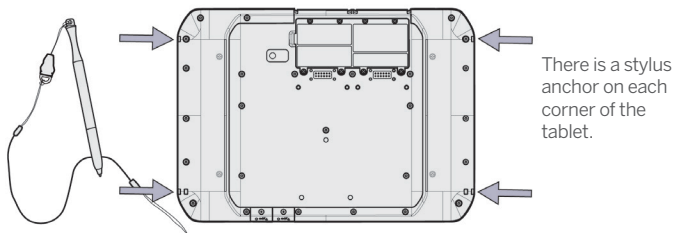


INSTALL THE SCREEN PROTECTOR

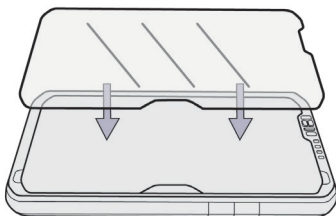

FULLY CHARGE THE BATTERY FOR 4 HOURS

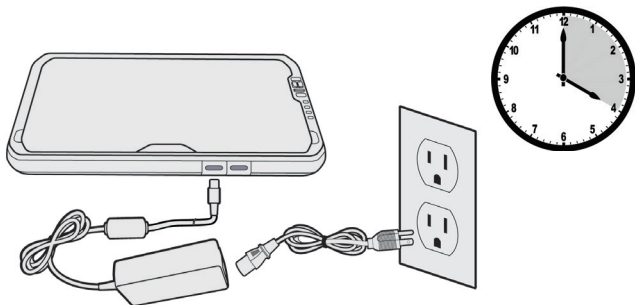

TURN ON AND SET UP THE T100 TABLET

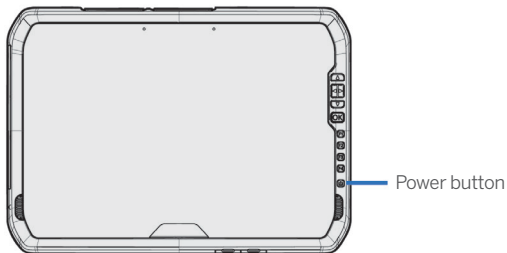

© 2020. Trimble Inc. All rights reserved. Trimble and the Globe & Triangle logo are trademarks of Trimble, registered in the United States and in other countries. All other trademarks are the property of their respective owners.
Revision A. P/N 120528-ENG (11/20)



www.trimble.com